


Pro UltraBright LED FOG LIGHT

WP ITM. LM532913, LM532914, LM532927,
LM532928, LM532929, LM532930

Care & Use Instructions

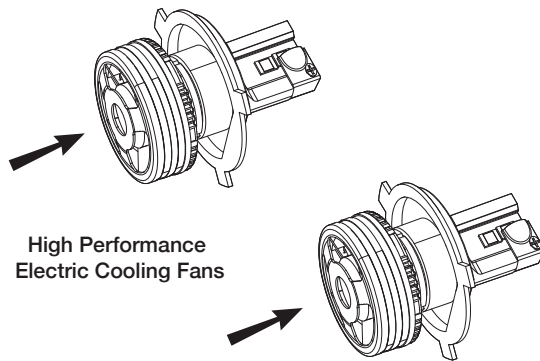

Important, retain for future reference:
Read carefully

Package Includes

- 2 x Pro UltraBright LED Fog Lights
- 4 x Cable Ties
- 1 x Manual
- 1 x Warranty Card


For LM532913 (H8/H9/H11/H16JP) only:
1 x Allen Wrench (For Angle Adjustment)

For LM532927(9005/9006) only:
2 x 9005 Mounting Rings (Pre-installed)
2 x 9006 Mounting Rings
1 x Allen Wrench

Specifications

- Operation voltage: 12V/24V
- Operation temperature: -40°F to 140°F (-40°C to 60°C)
- Raw Current: 3.75@12V / 1.875A@24V
- Color temperature: 6,500 K
- Lumen (Maximum):
 - H7/H8/H9/H11/H13/H16JP/9004/9005/9006/9007: 3,817 LM ± 15%
 - H4/9003:
 - High – 3,817 LM ± 15%
 - Low – 2,365 LM ± 15%
- Cable length with plug and controller: about 3.9 inches (10cm)


Product Overview

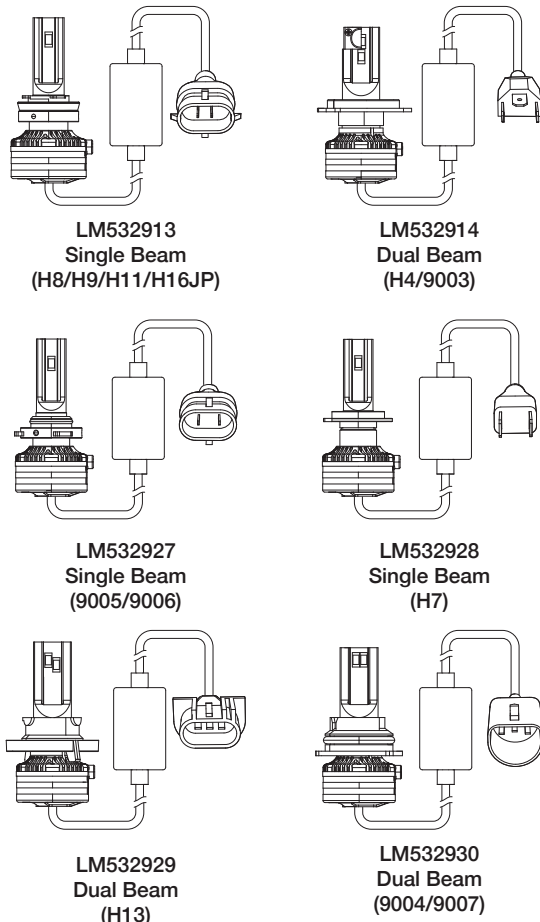


Installation

Review the owner's manual of your vehicle to reference how to access your light bulbs.

9003/H4/H7

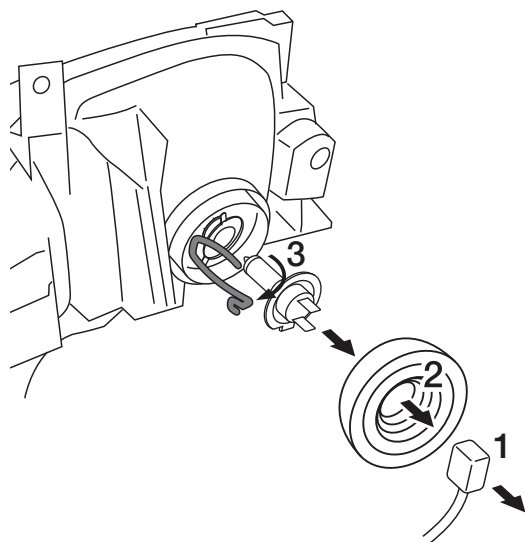


1. Disconnect the Fog Light connector.
2. Remove the headlight dust cover.
3. Release the metal spring and remove the original light bulb and its mounting ring.

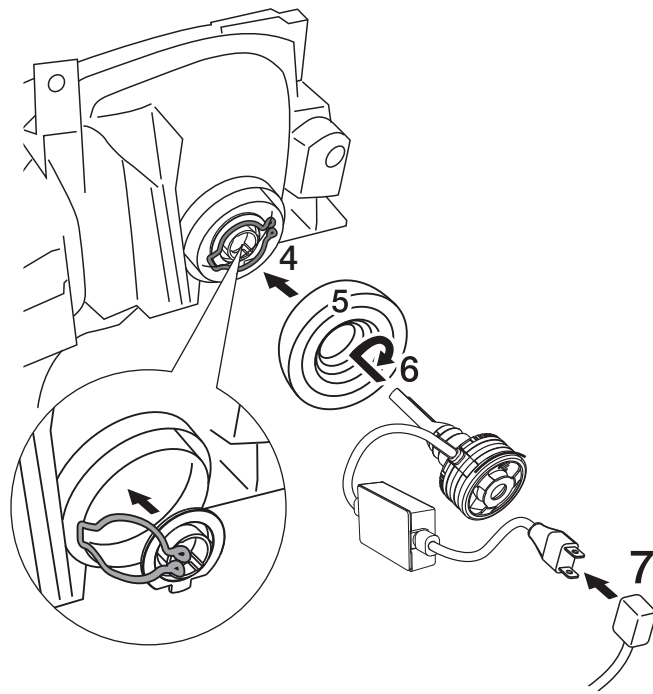


4. Insert the mounting ring into the socket and affix it with the metal spring.
5. Reassemble the dust cover.
6. Insert the Fog Light body into the socket and rotate clockwise to secure.
7. Connect the plug to the Fog Light connector.


8. Turn on the Fog Light. Make sure it is lighted and the beam is properly directed.

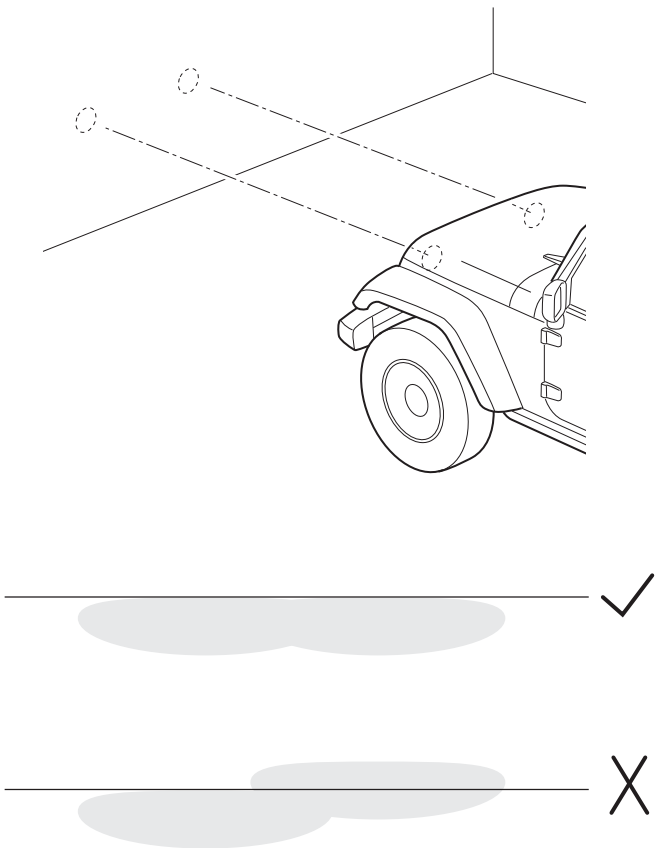


9. Use the included cable ties to secure the controller with the metal parts inside the headlight housing.

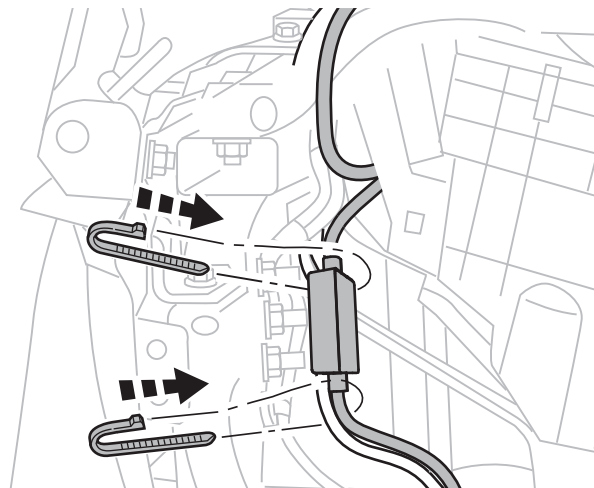

H8/H9/H11/H13/H16JP/ 9004/9005/9006/9007

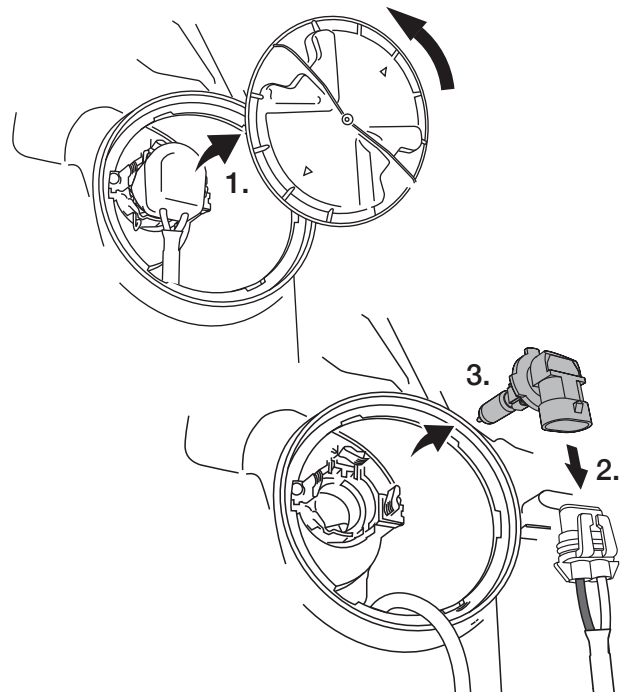

1. Remove the headlight dust cover.
2. Disconnect the Fog Light connector.
3. Remove the original light bulb and its mounting ring.

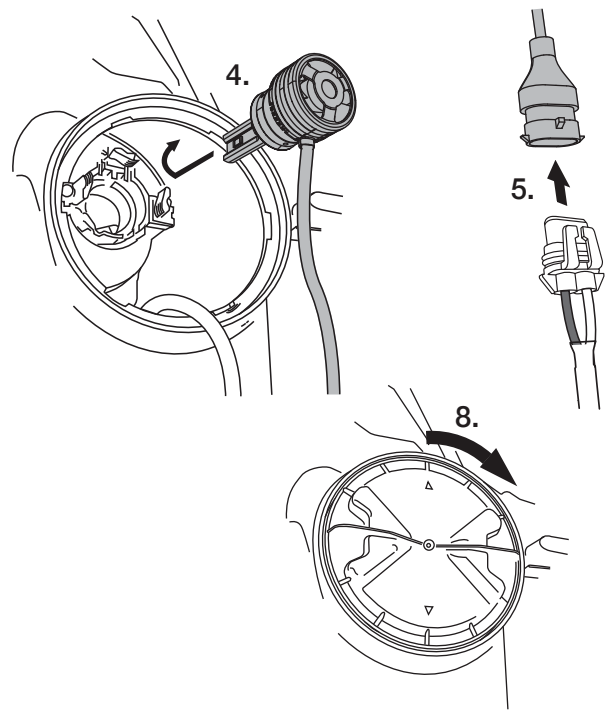



4. Insert the Fog Light body into the socket and rotate clockwise to secure.
5. Connect the plug to the Fog Light connector.
6. Turn on the Fog Light. Make sure it is lighted and the beam is properly directed.
7. Use the included cable ties to secure the controller with the metal parts inside the headlight housing.
8. Reassemble the dust cover.

Mounting Ring Adaptations by Fog Light Type

The interchange of the 9005 / 9006 mounting ring for LM532927:


The interchange needs to be done using the included Allen Wrench.

1. Unscrew and remove the 3 set screws.
2. Remove the 9005 mounting ring.
3. Position the 9006 mounting ring and reinstall the screws.

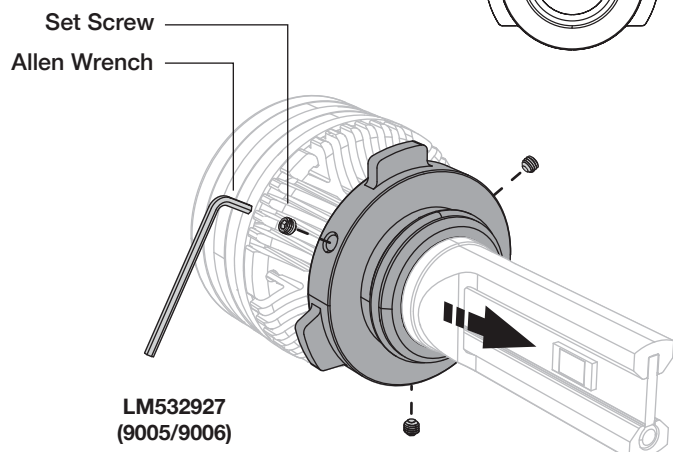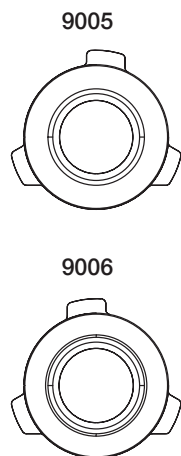

Converting mounting ring from 9007 to 9004 for LM532930:


1. Mounting ring is pre-installed as 9007.
2. Rotate the mounting ring counterclockwise to convert it into 9004 mounting ring.

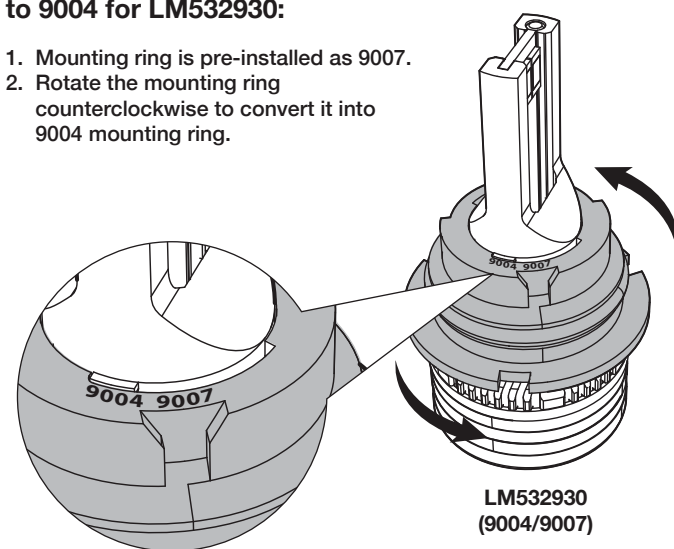


NOTE: Compatibility may vary depending on make and model of the vehicle. There are some cases where the LM532913 (H8/H9/H11/H16JP), LM532927 (9005/9006) and LM532928 (H7) Fog Lights will not turn on after plugging in. Often times the positive and negative terminals are positioned on opposite sides. When you come across this situation, please follow these steps:

1. Flip the plug halfway through and plug it into the Fog Light connector. Turn on the headlights and check if the light is on.
2. Utilize a cable tie or a piece of electrical tape (not included) to hold the connector securely if needed.

1.

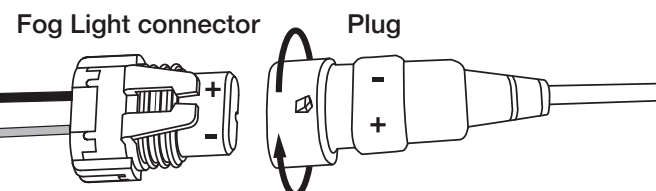

2.

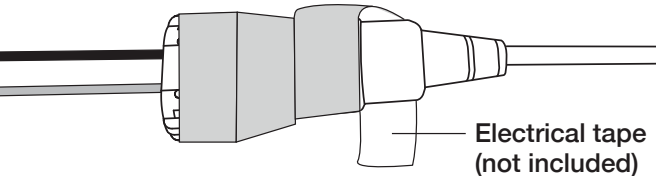

Notes:

- Some vehicles require the engine to be started for operation of all beams. If the LED light does not turn on, then rotate plug and try again.
- The headlight dust covers of some vehicles may not be put back successfully after the Fog Lights are installed. Look for the correct third party dust covers as a replacement.
- This Fog Light fits exclusively to 12V-24V vehicle input.
- When fetching and installing the Fog Lights, DO NOT touch the LED chips with your fingers to avoid injury.

- Try not to block or obstruct air flow of cooling fan.
- Before installing, please make sure the Fog Lights are free from damage, fracture and no impurities on the LED chip.
- For additional installation and product information, visit typesauto.com.

Warnings:

- Caution! If you get an error code, or lights are flickering, use a decoder to complete the installation. Decoder is sold separately.
- Considering the high intensity of light, DO NOT stare at the light when it is switched on.
- The surface of the LED will reach very high temperature when it is turned on. DO NOT touch the surface directly to avoid severe burns.
- Before changing the original Fog Lights, make sure it is turned off and cooled.
- Keep LED chips of the Fog Lights free of dust and oil.
- Check your state or provincial laws before installing. Vehicle owner must comply with all applicable laws.
- This product is intended solely for Off-road/Fog light purposes.
- The manufacturer and seller assume no liability for installation or use, which are solely the responsibility of the purchaser.
- This product is not DOT approved and is designed and intended for Off-road/Fog light uses only.
- Do not install or use product if it, in any way, impairs the safe operation of your vehicle. Not for use in extreme temperature.
- The manufacturer and seller are not responsible or liable for consequential, incidental, or indirect damages, whether to person or property, resulting from the installation or improper use of this product.