

TOURING ITEMS  
**TYPES**

# AD1 PLUS ELECTRIC AIR DUSTER

AIR DUSTER • VACUUM CLEANER • POWER BANK • FLASH LIGHT



ITM./ART. 1886267  
WP ITM. AC534563  
**User Manual**

BC

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

 
## TABLE OF CONTENTS

|                                |   |
|--------------------------------|---|
| Technical Specifications ..... | 2 |
| Feature Overview .....         | 2 |
| Product Dimensions .....       | 2 |
| Warning .....                  | 3 |
| Package Contents .....         | 5 |
| Charging The Air Duster .....  | 5 |
| Operation .....                | 6 |
| Warranty .....                 | 9 |

## TECHNICAL SPECIFICATIONS:


|                               |                                                                                       |
|-------------------------------|---------------------------------------------------------------------------------------|
| <b>Power:</b>                 | 100W                                                                                  |
| <b>Battery Capacity:</b>      | 14.4Wh 2000mAh 7.2V                                                                   |
| <b>USB-C Input/Output:</b>    | 5V 3A / 9V 2A / 12V 1.5A                                                              |
| <b>Working Voltage:</b>       | 7.2V                                                                                  |
| <b>Charging Time:</b>         | 1.5 hours                                                                             |
| <b>Dimension:</b>             | 3.27 x 1.45 x 5.4 in (83 x 37 x 137 mm)                                               |
| <b>Weight:</b>                | 0.6 lbs (272 g)                                                                       |
| <b>Speed:</b>                 | Level-1: 35,000RPM<br>Level-2: 50,000RPM<br>Level-3: 70,000RPM<br>Level-4: 110,000RPM |
| <b>Operating Temperature:</b> | 32°F ~ 104°F (0°C ~ 40°C)                                                             |
| <b>Storage Temperature:</b>   | -4°F ~ 140°F (-20°C ~ 60°C)                                                           |

## PRODUCT DIMENSIONS

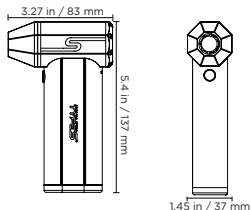

## FEATURE OVERVIEW

 1. Power Button
2. Dusting Outlet
3. Vacuum Inlet
4. Battery Capacity LED Indicators
5. USB-C Input
6. LED Light Switch
7. Flash Light

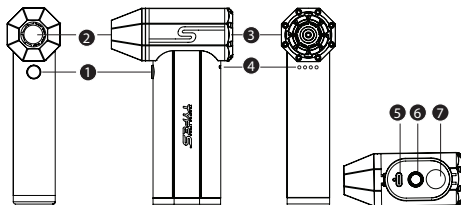

# WARNING

## INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

- Do not allow this product to become wet. Exposure to excessive moisture will damage the unit.
- Do not immerse the product in water.
- Do not operate the product in explosive atmospheres, such as in the presence of flammable liquid, gas or dust.
- Do not modify or disassemble this product.
- Do not operate the product in temperatures outside its operating range of 32°F to 104°F (0°C to 40°C).
- Do not store in locations where the temperature may exceed 140°F (60°C).
- Charge only using the charging cable provided.
- Dropping, hitting, or other excessive amounts of force to the Air Duster may damage the unit (external and internal), which may result in loss of operation, electrical fire, or cause other serious damage.
- Do not use any attachment that is not sold by Air Duster manufacturer which may result in a risk of fire, electric shock, or injury to persons.
- Do not disassemble the Air Duster; take it to a qualified serviceperson when service or repair is required. Incorrect reassembly may result in a risk of fire or electric shock.
- To reduce the risk of electric shock, unplug the Air Duster from the outlet before attempting any instructed servicing.
- Under extreme heat conditions, battery leakage may occur. Avoid contact with your skin. In case of skin or eye contact, rinse immediately with clean water and seek medical attention.
- If battery leakage occurs, take it to your local battery recycling center for disposal. Do not attempt to use.
- Do not vacuum sharp objects, such as glass or nails.
- Do not vacuum hot items, such as coals, cigarette butts, or any burning objects.
- Do not vacuum water or any other liquids.
- Do not vacuum flammable or combustible materials, such as gasoline.
- Keep hair, loose clothing, fingers and all body parts away from moving parts and air intakes.
- Do not use this appliance for anything other than its intended use.
- Empty the dust collector regularly.

## BATTERY DISPOSAL

The battery is self-contained and not consumer replaceable. The battery must be disposed of properly when it no longer holds a charge. Proper charging practices will increase the life of the product. For information on battery recycling, call toll-free 800-822-8837.

For information regarding air travel safety with batteries please check the U.S. Department of Transportation prior to travel at:

<http://phmsa.dot.govsafetravel/batteries> or contact your airline if traveling from a country outside the U.S.

**Note:** The Power Bank gives 14.4 watt hours of power.

## IMPORTANT SAFETY INSTRUCTIONS

## WARNING

**WARNING** – When using this product, basic precautions should always be followed, including the following:

- a) Read all the instructions before using this product.
- b) This device should be supervised when used around children.
- c) To reduce the risk of injury, close supervision is necessary when the product is used near children. Children should not operate this device unless under strict supervision by a person responsible for their safety.
- d) Do not put fingers into the product.
- e) To reduce risk of damage to the charging cable, pull the plug rather than the cable when disconnecting the Air Duster.
- f) Do not use this product if the charging cable is frayed, has broken insulation, or any other signs of damage.
- g) Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- h) The device shall be stored indoors and protected from the elements.
- i) The unit shall not be charged outdoors.
- j) When in use, steps should be taken to reduce the exposure to rain, sleet, snow, and the like.
- k) When charging the internal battery, work in a well-ventilated area and do not restrict ventilation in any way.

 
## CLEANING AND MAINTENANCE

- Always disconnect the Air Duster from power before cleaning or servicing.
- Unplug the Air Duster before cleaning it with a damp cloth. Use only mild cleaning agents, no solvents or corrosive chemicals.


**SAVE THESE INSTRUCTIONS**

## PACKAGE CONTENTS


1 x Air Duster

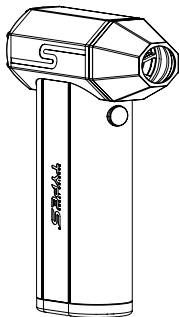


1 x Vacuum Compartment with Filter

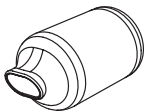 

1 x Blow Nozzle

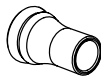 

1 x Push-in Brush

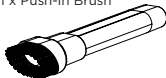 

1 x USB-C Cable



Warranty Card



1 x User Manual



## CHARGING THE AIR DUSTER

### USB-C Charging Cable



1. Plug the one end of the charging cable into a USB-C port on a 5V 2A / 9V 2A USB wall adapter (not included).
2. Connect the other end of the charging cable to the USB-C input port on the air duster.
3. Disconnect the air duster when it is fully charged. Store the air duster in a safe place when not in use.
4. If charging via a USB-C source, such as a laptop or power bank, double - press the air duster's bottom switch.

We recommend using the USB-C cable provided in this package as your charging cable.

## LED Indicators

While charging, the LED Indicators will flash in succession to indicate the current charge level. All lights will stay on solid when the air duster is fully charged.

| LED Status       | 1 Flashing<br>● ○ ○ ○ | 1 Solid<br>● ○ ○ ○ | 2 Solid<br>● ● ○ ○ | 3 Solid<br>● ● ● ○ | 4 Solid<br>● ● ● ● |
|------------------|-----------------------|--------------------|--------------------|--------------------|--------------------|
| Battery Capacity | Below 5%              | 5-25%              | 26-50%             | 51-75%             | 76%-Full           |

## CAUTION

DO NOT use the device while it is charging. Always disconnect the device from the power source before operating.

 
## NOTE

Fully charge the air duster before initial use. To preserve the battery life and performance, check the battery status regularly, charge when needed. Recharge every 2-3 months if air duster is not being used.

In order to reduce the risk of fire or electric shock, an adapter shall be chosen that is suitable for the application and is certified as a Class 2 or LPS power supply or power adapter.


# OPERATION

## A. Air Duster

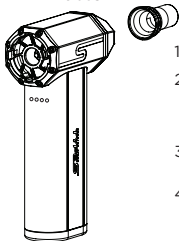


1. Attach the blow nozzle to the air duster.
2. Press the power button twice. The air duster will start at Level 1. Press again to cycle through the speed settings: Level 1 > Level 2 > Level 3.
3. Press and hold the power button to turn off the air duster.
4. To immediately activate Level 4, press and hold the power button while the air duster is off. Release to stop the airflow.

## B. Vacuum Cleaner

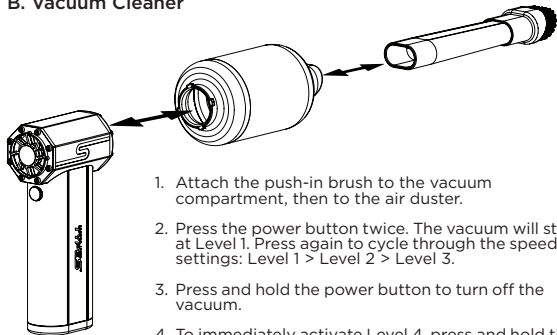 

1. Attach the push-in brush to the vacuum compartment, then to the air duster.
2. Press the power button twice. The vacuum will start at Level 1. Press again to cycle through the speed settings: Level 1 > Level 2 > Level 3.
3. Press and hold the power button to turn off the vacuum.
4. To immediately activate Level 4, press and hold the power button while the vacuum is off. Release to stop the suction.


## Cleaning and Maintenance

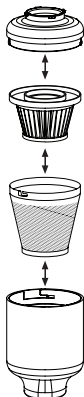 

1. Detach the vacuum compartment from the unit.
2. Hold the compartment upright and twist the cap counterclockwise to open.
3. Take out the filter and the mesh, then empty the contents of the vacuum compartment.
4. Reassemble the vacuum compartment.




### C. Power Bank

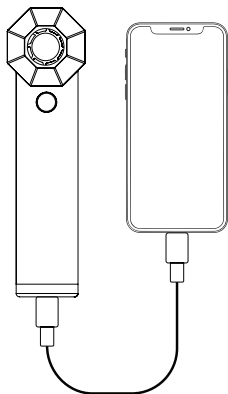 

Charge your mobile device using either the original charging cable or an approved cable certified by the manufacturer.

### D. Flash Light

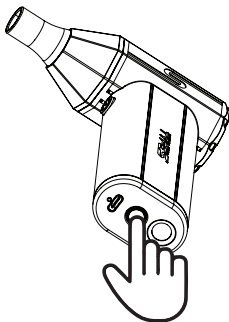 

| Light Mode   | Behavior                                               |
|--------------|--------------------------------------------------------|
| Spotlight    | Press the light switch once                            |
| Strobe Light | Press the light switch once while in spotlight mode    |
| Hazard Light | Press the light switch once while in strobe light mode |
| Turn Off     | Press the light switch once while in hazard light mode |

# WARRANTY

## TYPE S

### LIMITED WARRANTY

TYPE S warrants, to the original purchaser, that its products are free from defects in material and workmanship for 1 year from the date of original purchase. Where permitted by law, TYPE S liability shall be limited to that set forth in this limited express warranty. This limited express warranty shall be the exclusive remedy of the purchaser and TYPE S makes no other warranty of any kind aside from the limited express warranty stated above.

**NOTE:** Warranty only applies for North American customers of purchases made in North America.

### CONDITIONS OF WARRANTY

If during the 1 year warranty period your new product is found to be defective, TYPE S will repair such defect, or replace the product, without charge for parts or labor subject to the following conditions:

1. All repairs must be performed by **TYPE S**.
2. All warranty claims must be accompanied by a copy of the sales receipt or bill of sale.
3. The equipment must not have been altered or damaged through negligence, accident, improper operation, or failure to follow the product instructions for installation, use, or care.
4. The replacement of parts is excluded from the warranty when replacement is necessary due to normal wear and tear.
5. Repair or replacement parts supplied by **TYPE S** under this warranty are protected only for the unexpired portion of the original warranty.
6. This is a "repair or replace" warranty only, and does not cover the costs incurred for the installation, removal or reinstallation of the product, or damage to any mobile phone device or vehicle.

### OWNER'S RESPONSIBILITIES

TYPE S will make every effort to provide warranty service within a reasonable period of time. SHOULD YOU HAVE ANY QUESTIONS ABOUT SERVICE RECEIVED OR IF YOU WOULD LIKE ASSISTANCE IN OBTAINING SERVICE, PLEASE CALL TOLL FREE 1.866.294.9244 DURING REGULAR BUSINESS HOURS MONDAY THROUGH FRIDAY 8:00 AM TO 5:00 PM.

For customer service and technical support, please call us at 1.866.294.9244. If at that time it is determined that a replacement unit is needed, the support representative will issue a Return Authorization and instruct on how to get a new unit. TYPE S makes no other warranty of any kind aside from the limited express warranty stated herein.

**NOTE:** Toll Free # is for North America Customers ONLY.

DISCLAIMER OF WARRANTIES, INCLUDING WARRANTY OF MERCHANTABILITY AND WARRANTY OF FITNESS FOR PARTICULAR PURPOSE: EXCEPT AS SPECIFICALLY SET FORTH HEREIN, NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, IS MADE AS TO THE AIR DUSTER. TYPE S AND/OR ITS AFFILIATES EXPRESSLY DISCLAIMS, WITHOUT LIMITATION, ANY STATUTORY WARRANTIES AND ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

TYPE S and/or its affiliates are not responsible for a user's intended or actual use of the Air Duster. In no event shall TYPE S and/or its affiliates have any liability for any losses (whether direct or indirect, in contract, tort or otherwise) incurred in connection with the Air Duster, including but not limited to damaged property, personal injury and/or loss of life. Neither shall TYPE S and/or its affiliates have any liability for any decision, action taken based on relying on the stability or performance of the Air Duster. TYPE S and/or its affiliates, the manufacturer, distributor and seller shall not be liable for any injury, loss or damage, incidental or consequential, arising out of the use or intended use of the product.

**FCC Compliance Statement:**

AD1 PLUS Electric Air Duster

Model: AC534563

Responsible Party:

TYPE S

2975 Red Hill Ave., Ste. 100, Costa Mesa, CA 92626

Tel: 1-866-294-9244

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



A Horizon Brands Company  
2975 Red Hill Ave., Ste. 100, Costa Mesa, CA 92626  
Mon - Fri, 8AM - 5PM (Pacific Time)  
Tel: 1-866-294-9244 (English only) | info@typesauto.com  
©2026 TYPE S. All rights reserved.  
www.typesauto.com

Made in Cambodia  
ML-534563KH\_V1