

TOURING ITEMS
TYPES®

BRONCO



***2021+ FORD BRONCO
BUMPER LIGHT BRACKET***

WARNINGS

IMPORTANT SAFETY INSTRUCTIONS

1. SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions.
2. Before using this product, read all instructions and cautionary markings.
3. Do not operate with damaged bumper light bracket – replace it immediately.
4. Do not operate the bumper light bracket if it has received a sharp blow, been dropped, or otherwise damaged in any way.

CAUTIONS

1. Do not install or use product if it, in any way, impairs the safe operation of your vehicle.
2. Follow manufacturer's instructions to ensure the product is properly and safely installed.
3. Check your state or provincial laws before installing. Vehicle owner must comply with all applicable laws.
4. Manufacturer and Seller assume no liability for installation or use, which are solely the responsibility of the purchaser.
5. The Manufacturer and Seller are not responsible or liable for consequential, incidental, or indirect damages, whether to person or property, resulting from the installation or improper use of this product.

 **WARNING:** This product can expose you to chemicals including Di(2-ethylhexyl)phthalate (DEHP) and Diisononyl Phthalate (DINP), which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

TOOLS REQUIRED (NOT INCLUDED)

- T-40 Torx Bit
- Vinyl Wrap / Bumper Scrape Guard
- Safety Glasses
- Work Gloves


BEFORE INSTALLATION

- Verify your vehicle type. This bracket is designed for 2021+ Ford Bronco models.
- Make sure the bracket does not interfere with sensors, tow hooks, or grille clearance.
- We recommend using vinyl wrap or bumper scrape guards during installation to help prevent scrapes.


SAFETY: Park the vehicle on a level surface, place the transmission in PARK, engage the parking brake, and allow the engine to cool before beginning installation.

INSTALLATION

1. If installing lights or other accessories (not included), securely mount them to the bracket before installing the bracket onto the vehicle. Verify mounted accessories do not interfere with sensors, grille airflow, or tow hook access.

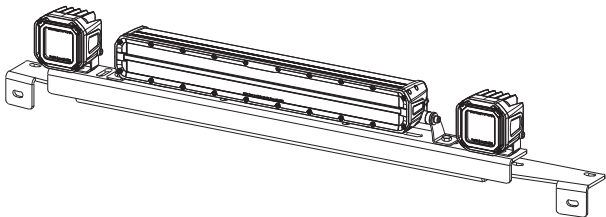

2. Slide the bracket onto the front bumper. Align the three holes on each side, then secure it using your vehicle's original front bumper screws with a T-40 torx bit (not included).

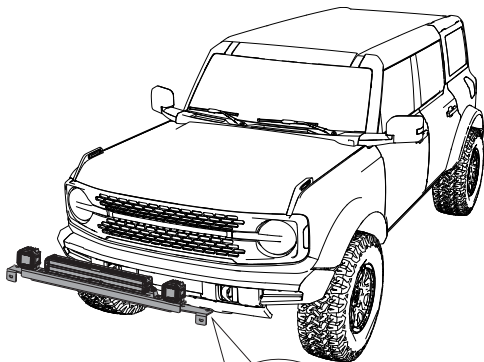

NOTE: Torque all factory mounting hardware to the vehicle manufacturer's recommended specifications.

Post-Installation Procedures

3. Start the vehicle and test all features.
 - Verify parking sensors, cameras, and driver-assistance features operate normally.
 - Verify tow hook access remains unobstructed.
 - Verify there is no contact with the grille, bumper, or body panels.

NOTES:

- If a warning message or sensor obstruction alert appears, inspect the bracket and mounted accessories for interference with vehicle sensors or cameras.
- Mounted accessories that extend above the bumper or into the grille opening may affect the operation of parking sensors, cameras, or other driver-assistance systems.

Ford Bronco is a registered trademark of Ford Motor Company. Horizon Brands is not associated with Ford Motor Company. These terms are used in this manual for identification purposes only.



A Horizon Brands Company
2975 Red Hill Ave., Ste. 100,
Costa Mesa, CA 92626
1.866.294.9244 | info@typesauto.com
©2026 TYPE S. All rights reserved.
<http://www.typesauto.com>

ML-535518E_V1